

Connecting System Consoles to Public LANs

Symptom

Unable to run system consoles on public LANs.

Version

All: Unable to run the primary and backup system consoles on public LANs.

Problem

Unsupported configurations

Fix

For all RVUs, the primary and backup system consoles must be connected to the dedicated LAN (which is connected to the PMF CRU Ethernet port that is designated for OSM or TSM connections only, and is associated with the \$ZTCP0 and \$ZTCP1 processes).